

 
**Quick**

**Reference Guide**

**Replacing paper in the Receipt Printer:**


-Receipt printer requires 48mm Thermal printer paper.

**Step 1:**

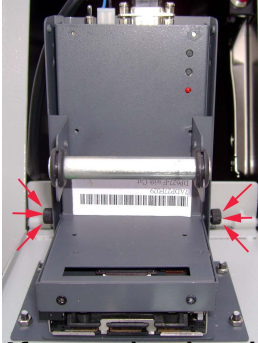


After opening the printer door, loosen the two thumb screws (red arrows) on either side of the printer.

**Step 3:**

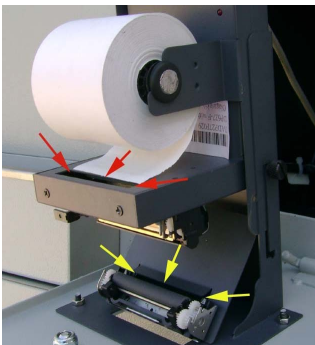 

There are two slots in the printer body that the paper must be fed through. One is in the main body of the printer (red arrows) and the other is on the roller door (yellow arrows).

**Step 5:**

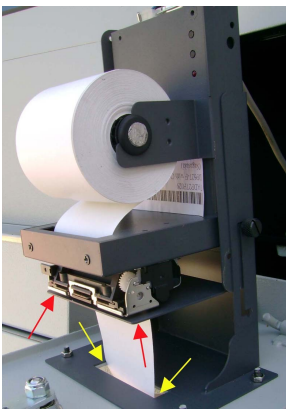 


Close the roller door (red arrows) and feed the extra paper through the slot on the printer door (yellow arrows).

**Step 2:**



 Once loose, lift the printer body up and secure it in the upper rest notches (green arrows). Locate the small lever on the lower left side of the printer body (yellow arrows). Press up on the lever (red arrows) to expose the rollers.

**Step 4:**

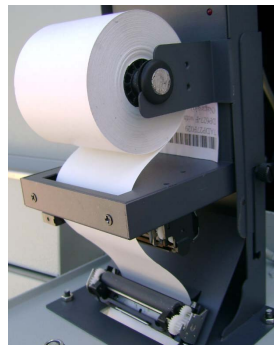

Place a new roll of paper on the spindle with the thermal side facing out (while feeding the paper, the thermal side will be facing back toward the printer body). Feed the paper as shown above.

**Step 6:**



Loosen the thumb screws, lower printer body to the lower rest notches and tighten the thumb screws.

**Finished!!!**